


## Installation Space and Height

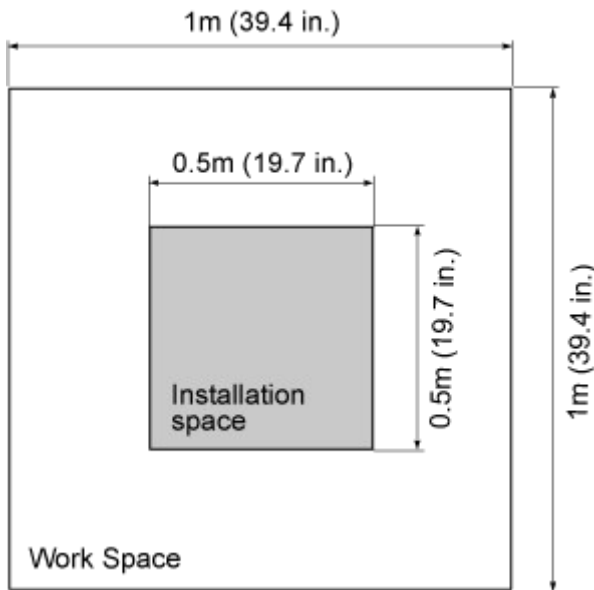

The space shown in the figure is required in order to use this machine.

The height of installation should be 0.6 m (23.7 in.) or higher above the work floor.

This machine is desktop type. Install in a location that allows easy access to areas such as the power switch during operation.

## Removing the Retainers

Retaining materials are attached to protect the machine from vibration during shipment.

- Remove all retaining materials. Any that remain may cause faulty operation or breakdown when the power is switched on.
- The retaining materials are required when moving the machine to a different location. Store them carefully so that they do not get misplaced.



**WARNING**

Carry out these operations before you connect the power cord.

Inadvertent powerup may result in pinched hands or other injury.



**CAUTION**

Under no circumstances move the spindle unit or table with your hands. It may cause a breakdown.

## Procedure

1. Make sure the power cord is not connected.
2. Detach these retainers (4 places).

When removing the retainers, manually move the table slightly toward the front of the machine.

Notice

Do not connect the machine and the computer at this time.

Make sure to make the connection by following the procedures.

