

















































What's New?

JobControl Release 7.4.9

Supported Engraver Types:

 standard  upgrade  available for a fee  not available - not relevant	View Level			Performance		Multi Color Option		Reverse Engraving	Vector Ordering
	Basic	Advanced	Expert	Normal	High	die creation	die and pad creation		
Speedy 100									 ²
Speedy 100 R	-			-	-	-	 ³		 ²
Speedy 300	-	-		-	-		 ¹		
Speedy MCO	-	-		-	-	-			
Finemarker	-	-		-	-	-	-		
Finemarker Hybrid	-	-		-	-	-	-		
Professional	-	-		-	-	-	-		
Laserati	-	-		-	-				
Speedy II				-	-		 ¹		 ²

³ Pad cutting with laser and manual inking

² Included in Expert view level

¹ Speedy 300 and Speedy II may be equipped with the Multi Color Option. This modification will result in the engraver type Speedy MCO.

 
Function array

Function	View:	Basic	Advanced	Expert
Process		Standard Stamp	Standard Stamp Relief Layer MCO (optional)	Standard Stamp Relief Layer MCO (optional)
Job Size		user defined templates	user defined templates	user defined templates
Job Name		„Quickprint“	user defined from application	user defined from application
Resolution		125/250/333/500/ 600/1000dpi	125/250/333/500/ 600/1000dpi	125/250/333/500/ 600/1000dpi
Stamp Shoulder		steep/medium/flat predefined	up to 10 different user adjustable shoulders	up to 10 different user adjustable shoulders
Process Colours		4	8	16
Vector Ordering		optional	optional	ü
Position Jobs Multiple		-	-	ü
Move Laser		-	-	ü
Engrave Intermediate		-	-	ü
Halftoning Off (colour- engraving)		-	-	ü
Material Toolbar (parameter-change „on-the-fly“)		-	-	ü
Laser-Position TB		-	-	ü
Print Plate		-	-	ü
Auto Cut Line		-	ü	ü
Laser Homing		-	ü	ü
Halftone Settings		-	ü	ü
Rotary Attachment		-	ü	ü
Links		-	ü	ü
High Quality Engraving		-	ü	ü
Toolbar		-	ü	ü
Zoom Toolbar		-	ü	ü
Job-Position TB		-	ü	ü
Job History		-	ü	ü
Save/Open Plate		-	ü	ü

Repeat Cut Line	-	ü	ü
Duplicate Jobs	-	ü	ü
AutoPosition	-	ü	ü
Rotate Job	-	ü	ü
Snaplines	-	ü	ü
Marker	ü	ü	ü
Reverse Engraving	ü	ü	ü
QuickPrint	always on	ü	ü
QuickPrint Offset	ü	ü	ü
Raster Correction	ü	ü	ü
Job Export	ü	ü	ü
Sound on Job finished	ü	ü	ü
Engraver Control	ü (simplified)	ü	ü
Statusbar	ü	ü	ü
Z-axis adjustable, offset per color	ü	ü	ü
Job Recovery (work folder cleanup)	ü	ü	ü
Help Menue expansion (What´s New, UserManual, Trotec on the web, Software Registration)	ü	ü	ü

User adjustable stamp shoulders:

Stamp shoulder settings under OPTIONS – STAMP:
(available with Advanced and Expert view level)

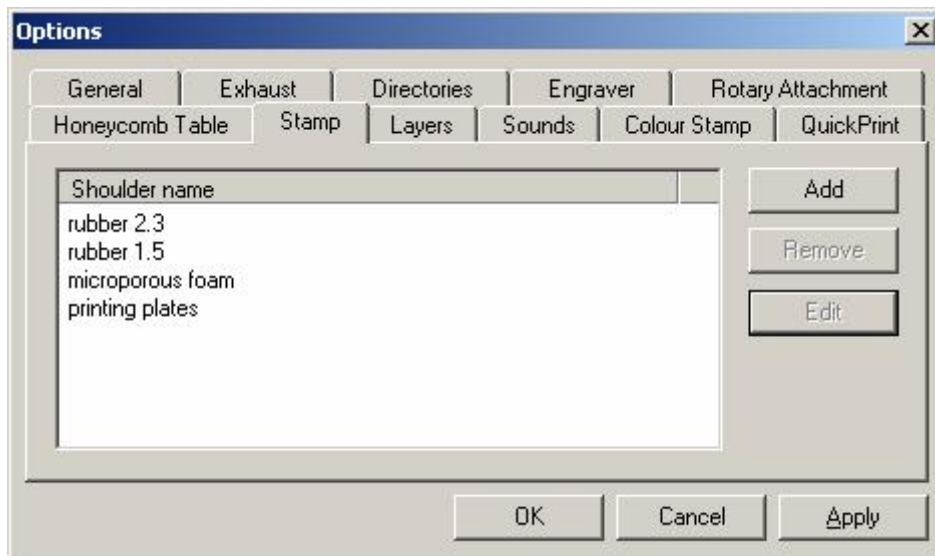

- Shoulder name
Names of the ten available shoulder settings, as displayed in the



printer driver. e.g.
Name must not exceed twenty characters.

 
Driver version **8.0.5.6** or higher is required to support the new shoulder types!

- Add
Adds a new shoulder to the list and opens the stampshoulder editor.
- Remove
Deletes the highlighted shoulder from the list.
- Edit
Opens the stampshoulder editor to enable modification of name and settings.

Stampshoulder Editor

Drag the red line to modify shoulder with.


Enter shoulder name here.

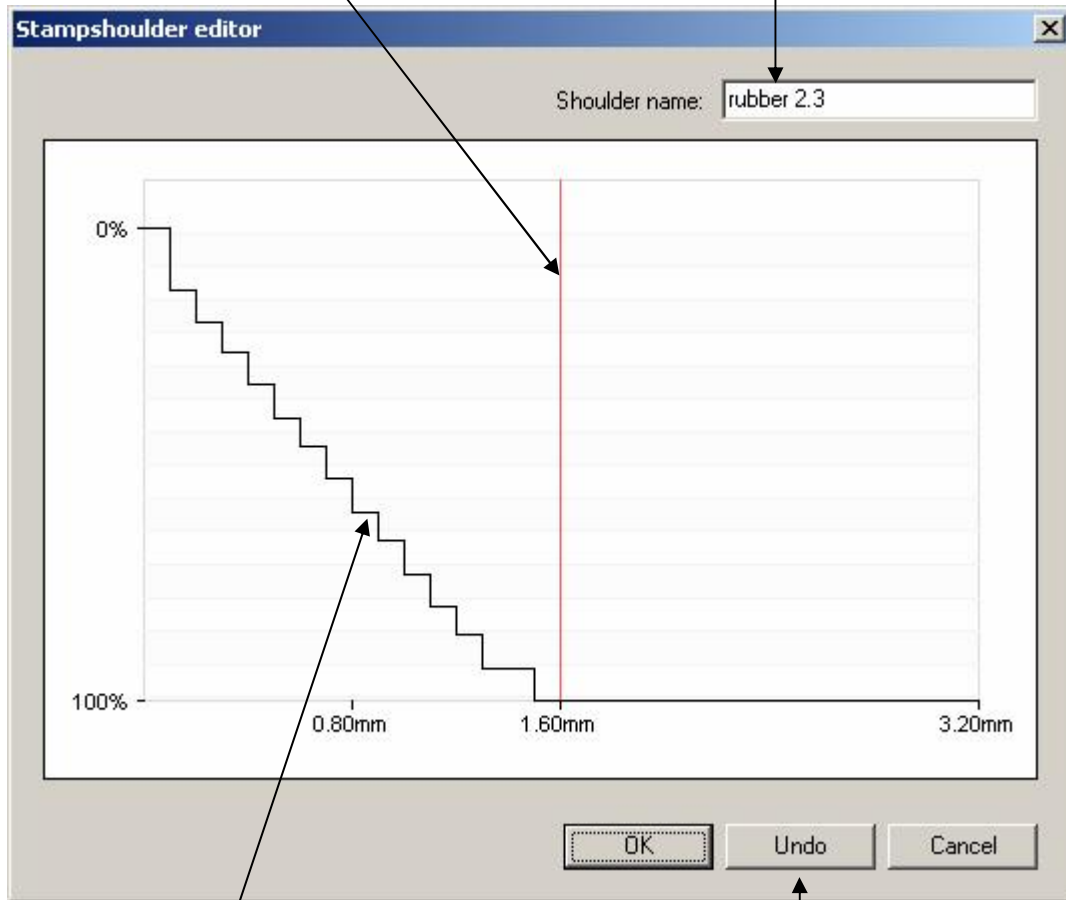

Drag the single levels to achieve the desired shoulder settings.

Press the Undo button to discard all modifications.

 If a Job printed with driver version prior to 8.0.5.6, is positioned on the plate, the following dialog will appear.

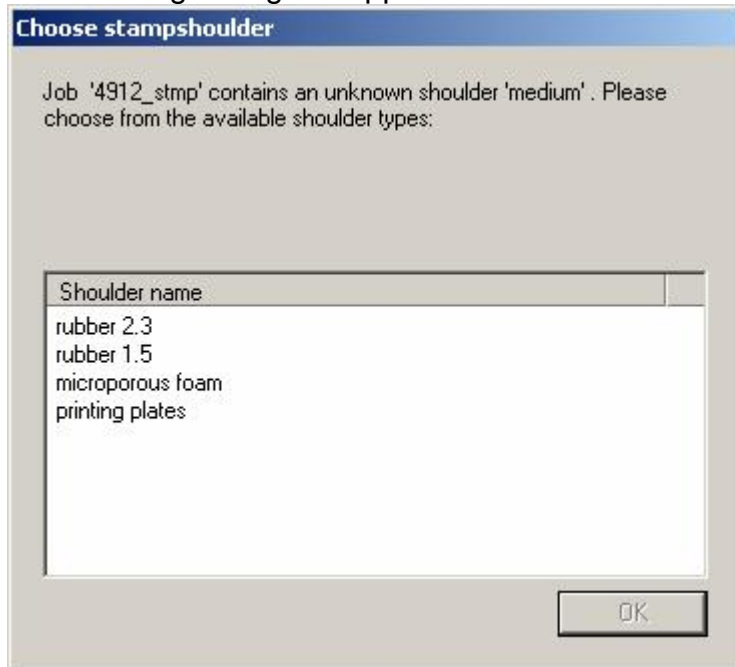


Select one from the available shoulders and click OK.
The chosen shoulder will be used temporary until JC is being restarted.

What's New?



JobControl Release 7.4.3

Vector ordering: (license key required in Basic and Advanced view)

Re-orders all vectors within a jobfile for way-optimised processing.

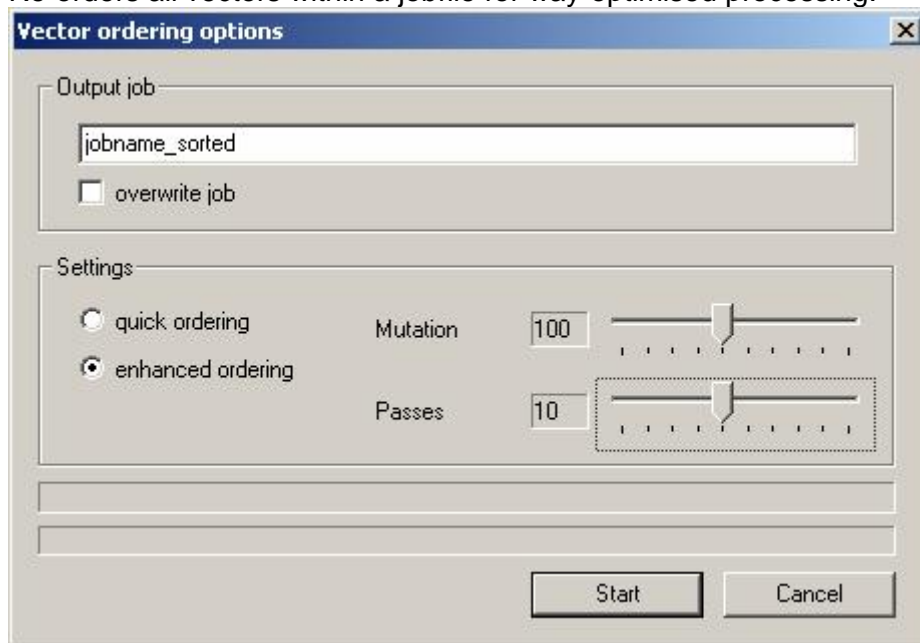

 
Accessible via menu 'Plate – Vector ordering', toolbar button and context menu.

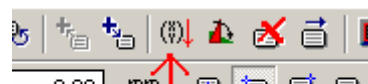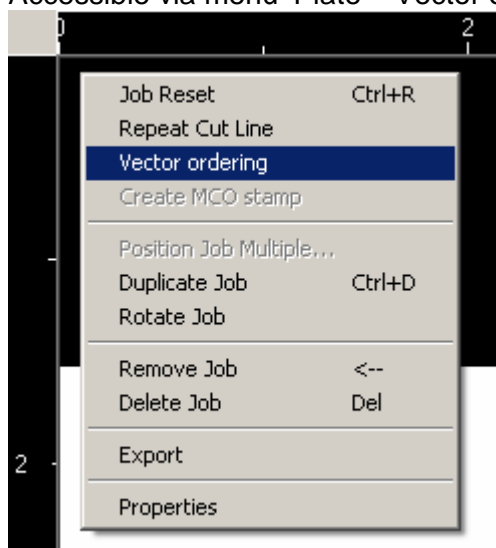

button 'Vector ordering'

Laser homing:

 New homing options.

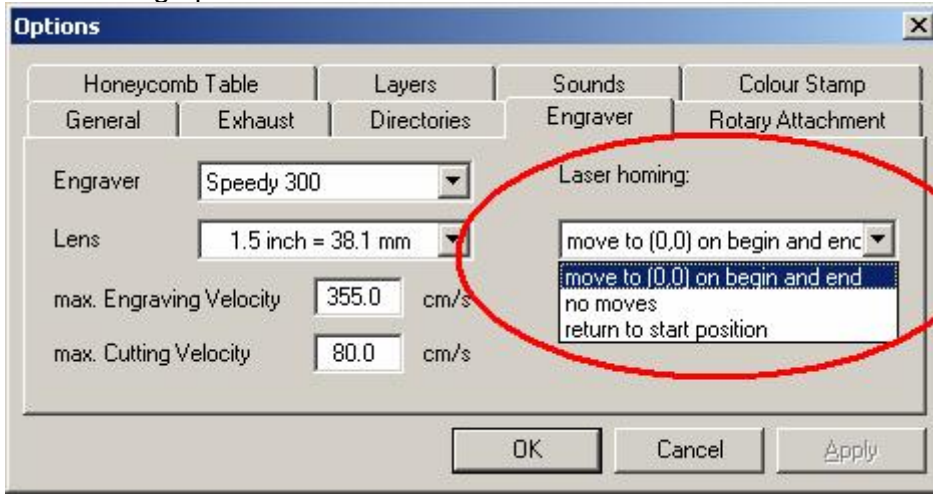



Exhaust start-up timer:

Allows the exhaust to start in advance to processing jobs.



QuickPrint offset:


Process QuickPrint jobs at any position (default 0/0).

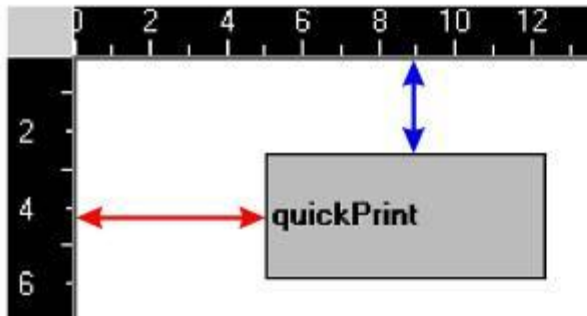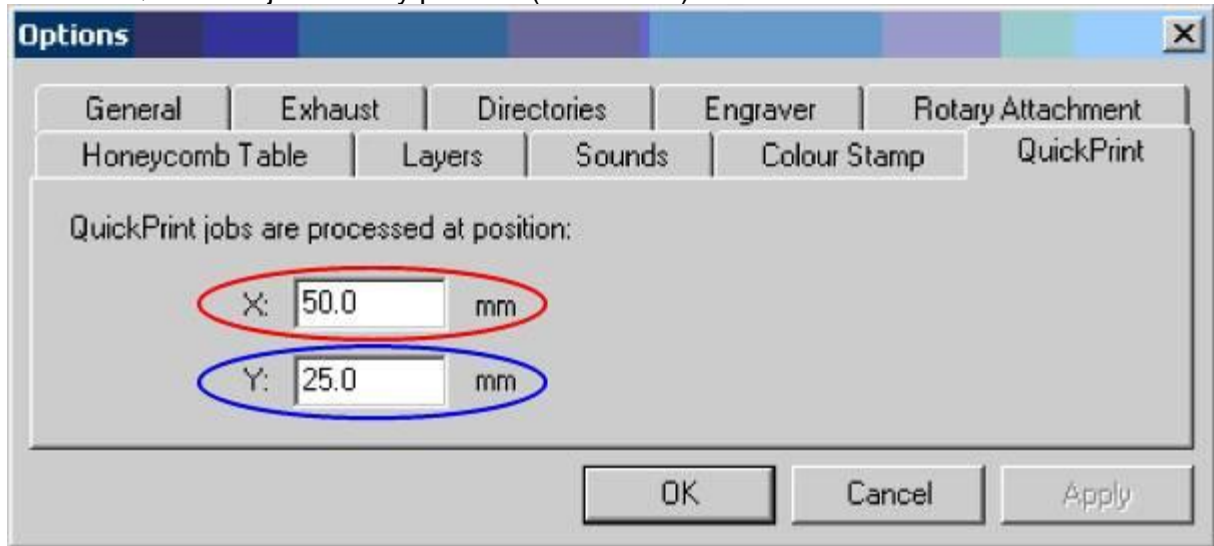

MCI – circular and oval-shaped pads:

Printy 44055 (oval), Printy 46030, 46040, 46130 and 46140 (circular) now supported.

CorelDraw Template:

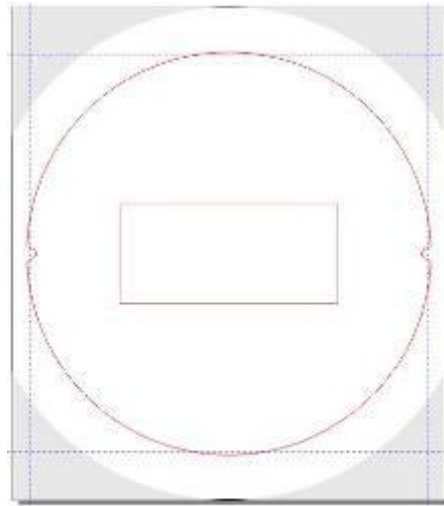

Printy 46140
43,6x49,8mm