


Changing the Type of Ink for Hi-Fi JET

Ink replacement requires three optionally available cleaning cartridges.

- 1** Press the [MENU] key and [▼] key to make the following screen appear on the display.

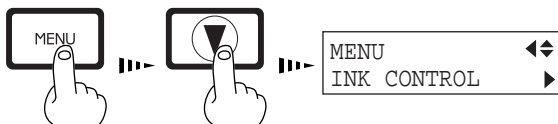


- 2** Press the [▶] key to make the following screen appear on the display.



- 3** Use the [▼] key to select [CHANGE INK SET], then press the [▶] key.



- 4** Use the [▲] and [▼] keys to select the new type of ink to use, then press the [ENTER] key.

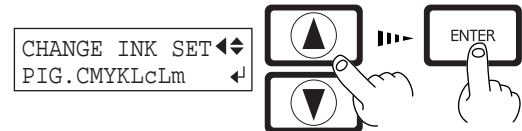

PIG. CMYKLcLm
 (Pigment ink : cyan, magenta, yellow, black, light cyan, and light magenta)
PIG. CMYKOrGr
 (Pigment ink : cyan, magenta, yellow, black, orange, and green)
DYE CMYKLcLm
 (Dye ink : cyan, magenta, yellow, black, light cyan, and light magenta)

- 5** When the display shown in the figure appears, discard the discharged ink in the drain bottle.

* Be sure to discard the discharged ink.
 Attempting to replace the ink while discharged ink remains may cause discharged ink to overflow from the bottle.



- 6** Mount the drain bottle and press the [ENTER] key to display the screen shown in the figure.



- 7** When all ink cartridges have been removed, ink replacement starts. Follow the messages on the display to carry out the procedure.

 Messages appearing during ink replacement



Insert a cleaning cartridge into the ink cartridge port for the flashing color.



Remove the cleaning cartridge from the ink cartridge port for the flashing color.

K = Black C = Cyan M = Magenta c = Light Cyan (O = Orange)
 m = Light Magenta (G = Green) Y = Yellow

- 8** When the display shown in the figure appears, insert the ink cartridge to be newly used.



- 9** When the display shown in the figure appears, ink replacement is finished. Press the [SETUP] key to go back to the top menu.

