

## Frequently Asked Questions Topic: MPX-60

ST10262004

## **FAQ - MPX-60**

Q: How do you correct the image so that it impacts in the correct area of a pendant?

A:

- 1. Ensure that the rubber pad is properly installed on the table (refer to page 57 of the Users Manual for procedure).
- 2. Ensure that the material is centered on the grid on the rubber pad (There are arrows on the rubber pad that indicate the center points).
- 3. Using one of the 4 brass plates that came with the machine, carry out the offset adjustment (refer to page 62 in the Users Manual for procedure).
- 4. Also the use of templates will ensure that the image fits in the area of the pendant being impacted. Templates can be obtained free of charge from www.eimimage.com or www.mpx60.com.

Disclaimer: All of the information contained in this document is based on the information available at the time of its creation. In no event will Roland DGA Corporation be liable to you for any damages, including damages for loss of business profits, business interruption, loss of business information and the like arising out of the use of or inability to use these materials.