



Upgrading a FJ-40/50 to FJ-42/52 Functionality

- 1.) Switch off the main power and unplug the FJ40/50.
- 2.) Remove the Main Board cover located on the reverse parallel panel.
- 3.) Once the cover is removed, you will be looking at the FJ40/50 Main Board. Located on the left side of the board will be a sequence of DIP switches. Please select DIP switch #1 and 2 for FJ-50 and flip to the ON position. FJ-40, please select DIP switch #1 (OFF) and #2 (ON).

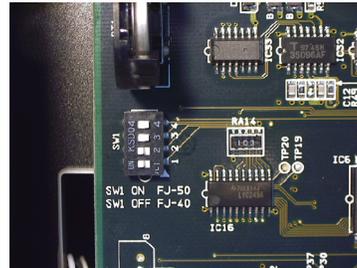

- 4.) Re-attach the Main Board cover and secure the screws.
- 5.) On the front panel, you will see a black cover. This is where the FJ print head will dock. Remove the four screws and then remove the panel.

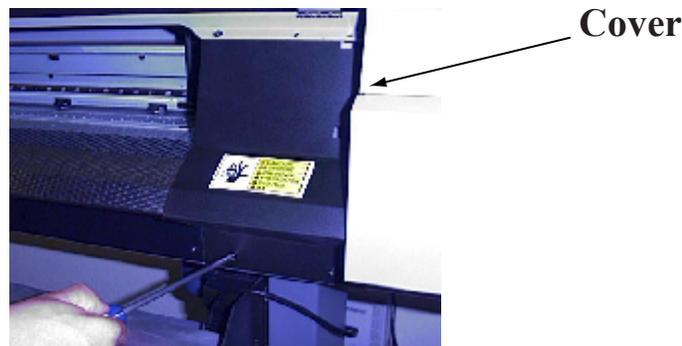

- 6.) The FJ -40/50 upgrade kit will be supplied with a white sponge pad. The sponge pad needs to be installed onto the hook located on the right side of the print head docking station. Re-attach the cover and then proceed .



Sponge

- 7.) You are now ready to perform the firmware upgrade from your windows computer (DOS).
- 8.) You will need a PC computer with MS-DOS and a parallel cable.(You cannot use Macintosh to perform the upgrade.)
- 9.) Connect the parallel cable to your computer and to the FJ40/50.
- 10.) Start DOS by activating the DOS Prompt for Windows 95/98. In Windows NT, activate the Command Prompt.
- 11.) Turn power ON the FJ-50/40 while pressing UP, DOWN and LEFT cursor keys simultaneously.
- 12.) When FJ-50/40 enters into the correct mode, the following message will appear in the LCD menu :
"VERSION UP" "ARE YOU SURE ?"
- 13.) To proceed, press the ENTER key. The FJ-50/40 will stay in **"Waiting"** status. To cancel updating, press the POWER key to shut down.
- 14.) Insert **"FJ-52/42 FIRMWARE DISK"** into the floppy disk drive of your PC, and open the disk to the current directory.
- 15.) Type **"A:\>download"** Updating starts.*Please be sure not to turn OFF power in the meantime.
- 16.) When updating finishes, the following message appears in the LCD : **"VERSION UP" "COMPLETE"**
- 17.) Turn the power OFF. When you turn ON the FJ-50/40 the next time, the new firmware will be activated.
- 18.) When you re-power your FJ40/50, the new version 2.10 is installed.
- 19.) Select menu, use the down arrow until to reach HIGH SPEED MODE.
- 20.) Right arrow to enable or disable the HS mode and then press enter.
- 21.) On the main control panel select Print Quality button. Scroll through the menu until you reach HS Photo or HS Super mode and then select enter to save the settings.