


4-5 FIRMWARE UPGRADE (Referential Time : 5 min.)

- 1** Make sure to fix the MAIN COVER and the REAR COVER when you do this operation.

Connect the machine to the PC with a USB cable.

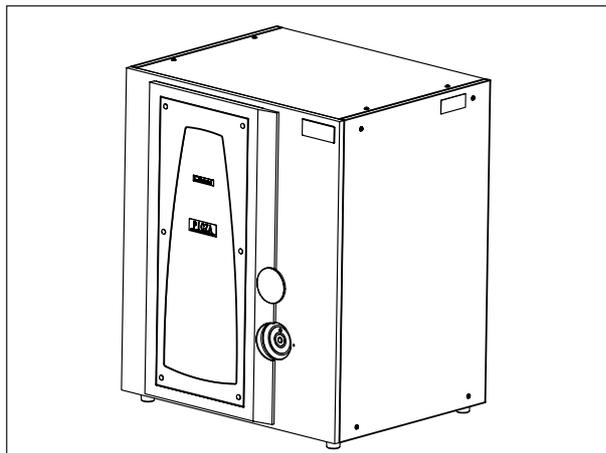

- 2** Open the door and close it while pressing the Standby key, and release the key within 1 second after the Standby LED becomes on. The machine enters the firmware download mode.



When the machine enters the firmware download mode, the Standby LED lights up Blue and Red.



The Red light can't be recognized if seen from above. See the LED head-on.

If you fail to enter the firmware download mode, open the door and try again.

If the machine fails to enter the firmware download mode with the Main board which the firmware is not installed in, 1 Movement LED also becomes on.

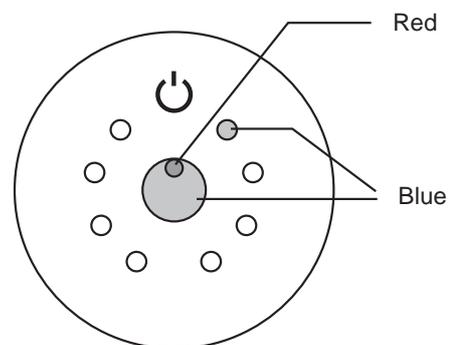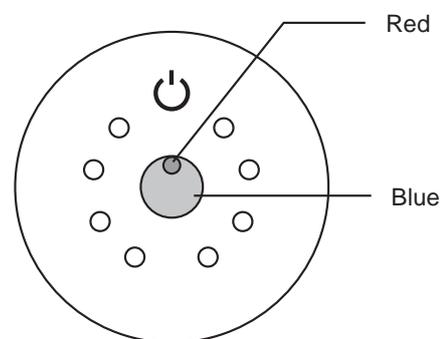

- 3** Start the firmware download program, T232.exe.

Click [Browse], and select the firmware file.

