

Trotec Firmware Updates Via Job Control

- a) Download the target version
- b) Unzip the package onto a flash drive or disk
- c) Open the laser lid
- d) Connect to the laser via USB
- e) Go to the Trotec Job Control Menu under “Settings”
- f) Choose “Firmware Upgrade”
- g) A pop-up will allow you to choose a “ttu” file, like “update.ttu”.
- h) The system will load all the hex files and will prompt you when completed.

If the update stalls half-way through, check to see if the USB connection is still active, and re-try.