


How to download the Optional Software

How to download the Optional Software


- 1 Run the Roland Software Package.
- 2 Windows Vista / Windows 7: When the AutoPlay menu appears, click [menu.exe]. You will then find [User's Account Control] dialog and click [Admit] or [Yes] to proceed the installation. Soon the installation menu will be displayed.
- 3 Click [Custom Install].



- 4 Click "Download" for Option Software.

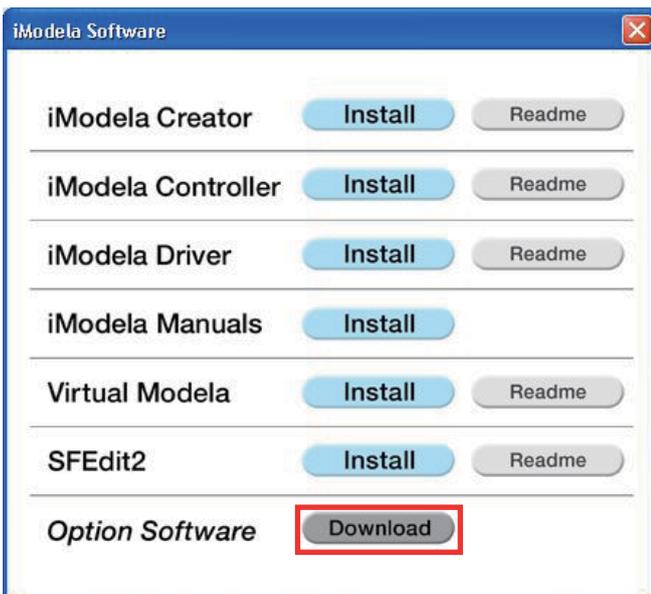

- 5 Click [Download] button and the special website comes up.
※ Connect your PC to the internet beforehand.

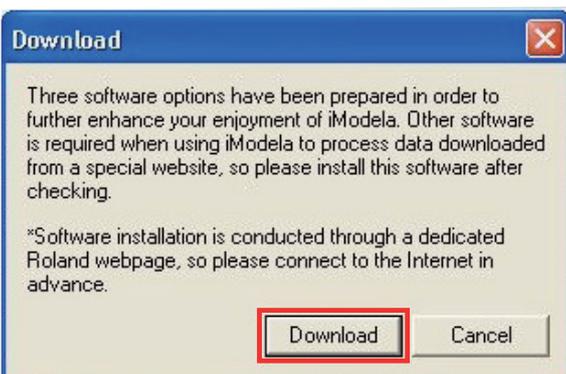

- 6 Click [Readme] of the software and read the installation procedure well.
Then click [Download] button to install the software by following the procedure.

iCreate
Roland

Roland DG Corporation

Download

[| Japanese |](#)

Three software options have been prepared in order to further enhance your enjoyment of iModela. Other software is required when using iModela to process data downloaded from a special website, so please install this software after checking.

* When you install any of the following software, please uninstall the old version before installing it.

	MODELA Player 4 for Windows® This simple CAM software reads 3D data created in commercial 3D CAD software and 3D data obtained through the Internet, enabling iModela use this data for cutting and processing. In addition, MODELA Player 4 is required when processing data items downloaded from the Gallery in our special website that show the MODELA Player 4 icon. Readme ->Download
	3D Engrave for Windows® This software is used for 3D object engraving, with simple operations enabling the design and processing of 3D nameplates and reliefs, etc. Readme ->Download
	ClickMILL for Windows® This handy software enables hole-punching, flattening, beveling, pocket processing, etc., without the need to use 3D CAD software. Readme ->Download

*For detailed usages methods for each piece of software, please check the Help menus after installation.

- 7 Follow the instruction as each installer.
- 8 Click  of the download screen after the software installation is completed.
- 9 Remove the CD from your computer.