

The installer for the Windows-based driver and other software has been upgraded, and it requires you to follow different installation procedures from what is described in the User's Manuals. To install the Windows-based driver and other software, be sure to read this document.

System Requirements

For the latest information, see the Roland DG Corp. website (<http://www.rolanddg.com>).

Operating system	Windows XP/Vista/7 (32 bit / 64 bit edition)
Processor	The minimum required CPU for the operating system
Memory	The minimum required Memory for the operating system
Optical drive	CD-ROM drive
Free hard-disk space required for installation	33 MB

The Software You Can Install and Set Up

For information about the outline of each software program, refer to the User's Manual for each modeling/engraving machine.

- Windows driver
- MODELA (MODELA Player, MODELA 3D DESIGN, MODELA 3D TEXT)
- Virtual MODELA
- Dr. Engrave
- 3D Engrave

Installing the Windows-based Driver



Notice

When using ME-US3 (USB-serial conversion cable), be sure to install the ME-US3 driver first and then install the Windows-based driver.


☞ "ME-US3 Installation & Cable Connection Guide"

Procedure


- 1 Log on to Windows as an "Administrator" or a member of the "Administrators" group.
- 2 Insert the Roland Software Package CD-ROM into the computer. (Windows Vista/7: When the automatic playback window appears, click [Run menu.exe].) The setup menu appears automatically.
- 3 When using ME-US3 (USB-serial conversion cable), install the driver software for ME-US3.

☞ "ME-US3 Installation & Cable Connection Guide"

- 4 Click [Install] of "Windows Driver."
An Installation and Setup Guide matched to the basic software on your computer is displayed. Follow the instructions in the Installation and Setup Guide to finish installing. Windows 7/Vista: When [User Account Control] window appears on the screen, click [Yes].

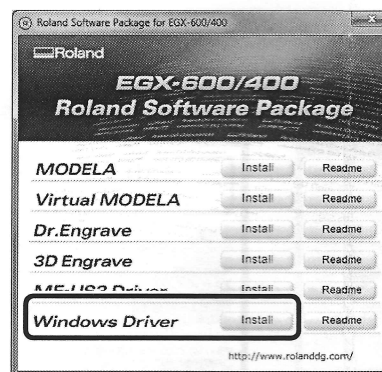

Setup Menu

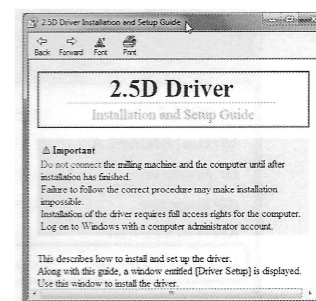

Installation and Setup Guide


POINT!

When using ME-US3, select the port which was added during the installation of the ME-US3 driver for the process where you are to select one for the "Port" while installing the Window-based driver.

☞ "ME-US3 Installation & Cable Connection Guide"

Uninstalling the Windows-based Driver

For information on how to uninstall the Window-based driver, refer to the readme.txt file for the driver.

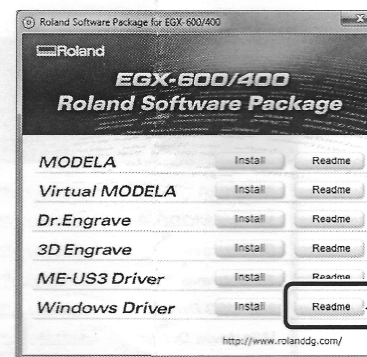





Setup Menu

Click here to display the readme.txt file.

Installing the Software

Procedure

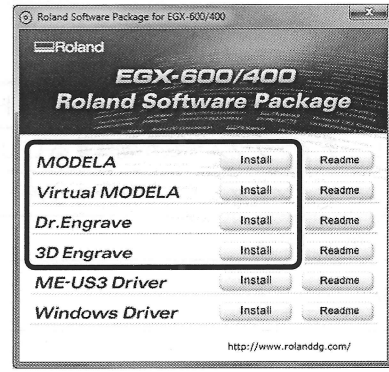- 1 Display the setup menu of the Roland Software Package.
- 2 Click [Install] of the program you want to install. The setup program starts.
 

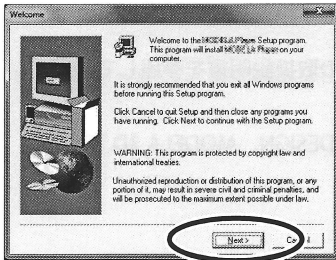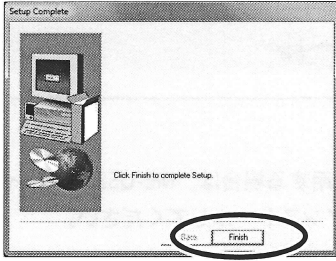Setup Menu
- 3 Click [Next], and follow the messages to carry out setup and finish setting up the program. Windows 7/Vista: When [User Account Control] window appears on the screen, click [Yes].
 
- 4 Click [Finish], [Close], or [OK]. Installation process finishes.
 
- 5 Repeat steps 2, 3, and 4 to install and set up each program.
- 6 When all installation finishes, click [Close].
 
- 7 Remove the CD-ROM from the CD-ROM drive.



1000007004